


ELISA™

Adjustable shower kit

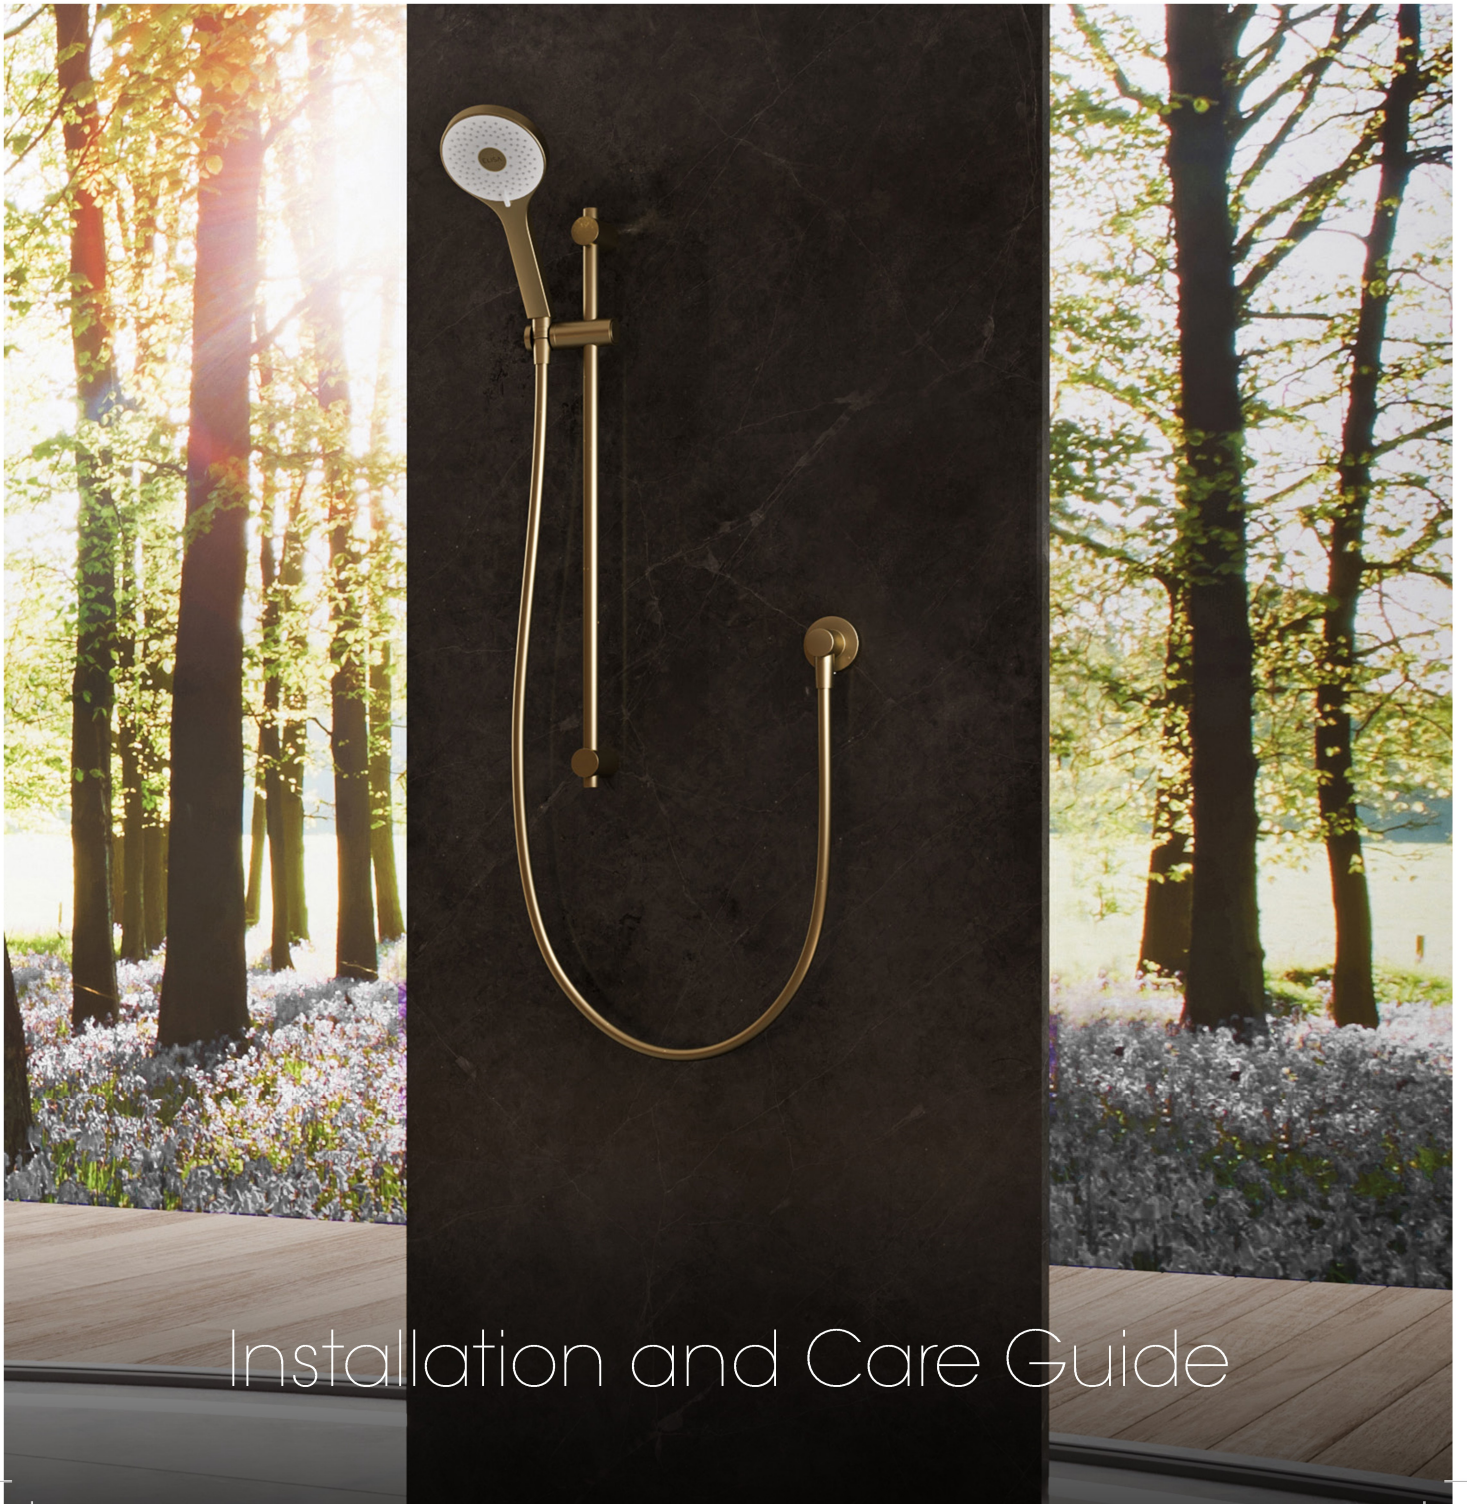


Installation and Care Guide



Important information

This product must be installed by a competent person in accordance with the relevant Water Supply Regulations. Prior to installation, ensure all literature supplied with this product is read and understood. We have taken great care to ensure that this product reaches you in perfect condition, however, should any parts be damaged or missing please contact your point of purchase. If you require assistance, please contact the Customer Helpline. The kit is supplied with universal fixings intended to secure it to a suitable wall.

COMPONENTS

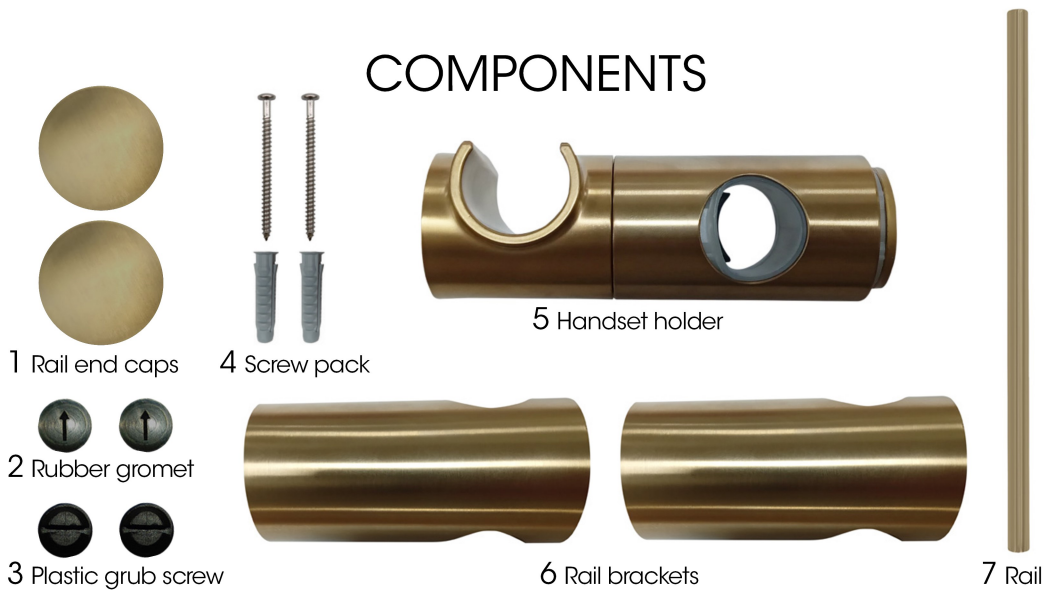

Handset and hose supplied / purchased separately

1

To fit the rail kit, using a level, prepare two fixing holes up to a maximum of 640mm apart. **Note:** the rail kit supplied utilises floating brackets that can be positioned to suit existing screw holes on retrofit installations.

2


Secure a rail bracket to the top fixing point on the wall using the supplied fixings (if suitable).

Note: ensure the cut-out tab is at the bottom edge of the bracket (as shown).




3

Depress the release button on the side of the handset holder and slide onto the rail assembly, positioning it about $\frac{3}{4}$ of the way down the rail. **Note:** the handset holder must be fitted so the holder is on the right and the release button on the left (as viewed from the front- as shown).

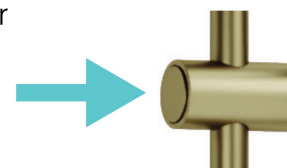

4

Slide the rail assembly up, and through the top rail bracket then insert the rubber gromet ensuring the directional arrow is facing out and pointing straight up or down. Temporarily secure into place with the plastic grub screw.

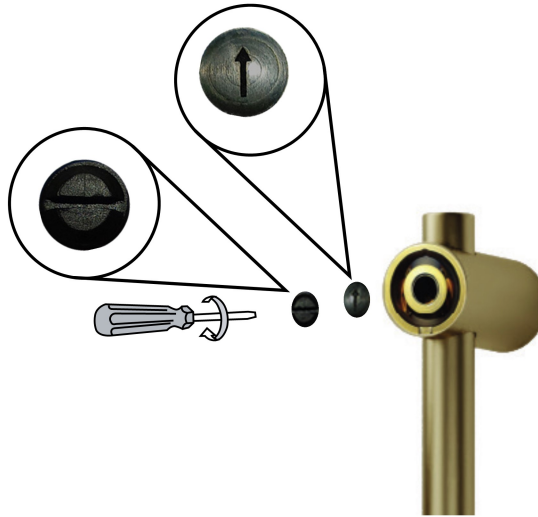

5


Secure a rail bracket to the bottom fixing point using the supplied fixings (if suitable).

6

Loosen the plastic grub screw of the top rail bracket and slide the rail down till it passes through the bottom bracket. Once in position, tighten the top bracket grub screw, then insert the rubber gromet and secure the grub screw into the bottom bracket.

7

Lining up the key-ways of the cover cap and bracket, firmly press the cover caps into position. The cover caps can be removed by inserting a flat blade screwdriver into the cut-out slot and levering the caps off.

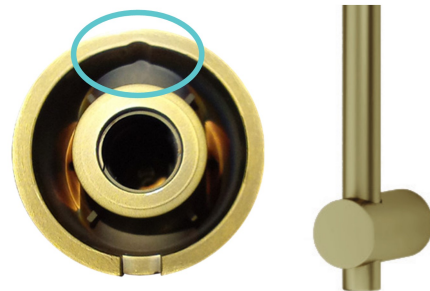

CARING FOR YOUR PRODUCT



DO NOT USE ABRASIVE CLEANERS. It is imperative that descaling is carried out in accordance with the manufacturer's instructions, substances that are not suitable for plastics and electroplated surfaces must not be used.



Cleaning tip: to keep your shower effortlessly clean, we recommend drying all shower components with a soft cloth after use. Your product can be cleaned using only a soft cloth and washing up liquid.



Register your guarantee instantly at [elisabathrooms.com
/service-and-support/register-your-guarantee](https://elisabathrooms.com/service-and-support/register-your-guarantee)



Speak to our Customer Service team on
01959 560010



Use Live Chat at
elisabathrooms.com



Or email us at
enquiries@elisabathrooms.com

Scan for warranty registration



elisabathrooms.com

The Flyers Way, Westerham, Kent TN16 1DE, UK

The company reserves the right to alter, change or modify the product specifications without prior warning.

Q5656 Part No 706509 Issue 01 Jan 22